

The MEIKO bottle washing system

Bottle washing with the MEIKO M-iClean UM and UM+



The clean way

The MEIKO bottle washing system

Take the professional path to a cleaner future with reusable bottles. Nearly every industry is in the process of introducing more reusable bottles – the sustainable solution for people and planet.


Glass and plastic bottles can be used and washed many times – saving valuable resources and making an active contribution to environmental conservation. The best part? It is easy to switch to reusable bottles when you use warewashing technology by MEIKO.

The clever MEIKO bottle rack and adapter are a simple, efficient, patent-pending solution for all standard bottle sizes and shapes.



Take a look at the benefits:

- Bottles washed in accordance with hygienically safe, DIN 10511 compliant standards
- Significant payroll and time savings compared to manual bottle washing
- Can be retrofitted to any MEIKO *M-iClean UM/UM+*
- Easy to switch between washing bottles and standard washware
- Suitable for glass and plastic bottles up to 114 mm in diameter and 245 mm in height (*M-iClean UM*) or 370 mm in height (*M-iClean UM+*). The bottle opening should measure 18-80 mm in diameter.

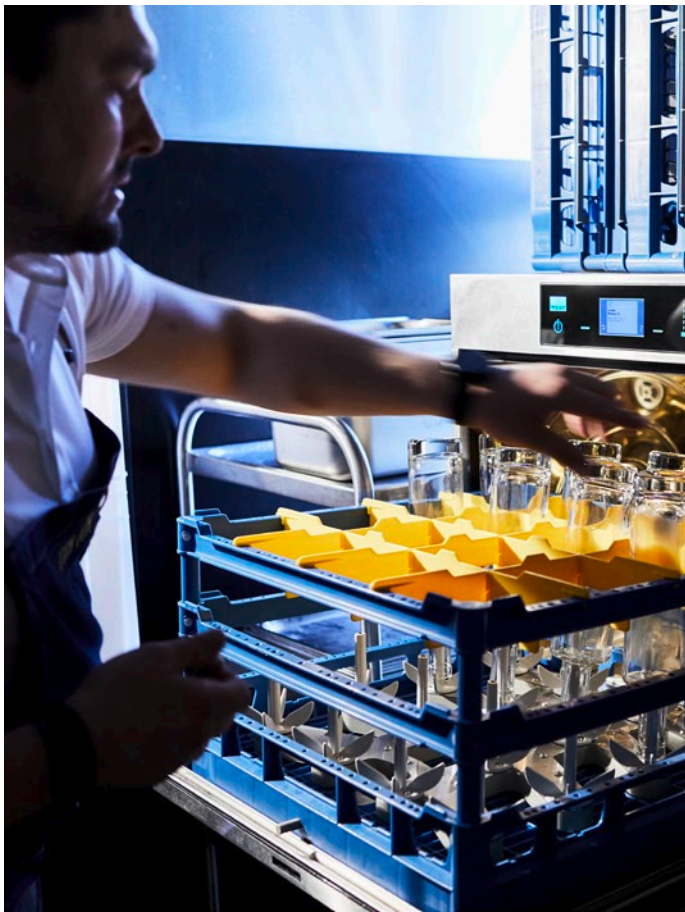

For all standard bottle sizes and shapes

MEIKO has the clean solution:

Our *M-iClean UM/UM+* machines are simple to use with the adapter system. And **just like that, you're ready to clean reusable bottles**. With a **capacity of up to 16 bottles**, they will have your bottles clean and ready for use in no time. It doesn't matter whether your bottles are made of glass or plastic.

The professional solution for **hotels, food service, communal catering** and **labs**, among other environments – hygienic washing for reusable bottles.

Compatible with all MEIKO *M-iClean UM* and *UM+* machines

Cleans **up to 640 bottles per hour**.

Sustainable and economical

Simply replace the bottom wash arm with the adapter included to turn your *M-iClean UM/UM+* into a bottle washing machine. This newly developed system uses separate, sealed channels to send first wash water and then rinse aid to specially designed nozzles which spray them directly into the bottles. This guarantees that the full power of the jet enters the bottle – ensuring that everything is hygienically cleaned.



Versions


Bottle rack without adapter

Plastic, for 16 bottles
 Plastic nozzles with stainless steel inserts
 Max. bottle height: 355-370 mm (*M-iClean UM+*),
 depends on bottle opening
 Interior bottle neck diameter: 18-80 mm
 Max. bottle diameter: 114 mm



Bottle rack with adapter

Plastic, for 16 bottles
 Plastic nozzles with stainless steel inserts
 Max. bottle height: 355-370 mm (*M-iClean UM+*),
 depends on bottle opening
 Interior bottle neck diameter: 18-80 mm
 Max. bottle diameter: 114 mm

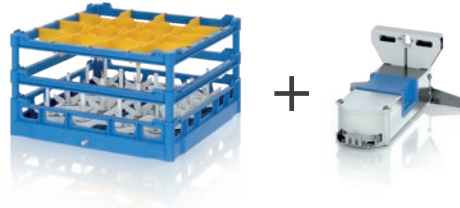

Bottle centring device (no image)

Recommended for flawless washing results on very narrow
 plastic bottles, for 16 bottles
 Max. bottle diameter: 100 mm

Compatible with:



M-iClean UM



M-iClean UM+

Cleaning capacity:

Up to 640 bottles per hour

MEIKO[®]
ACTIVE



For sustainable hygiene and impressive
 washing results, MEIKO recommends
 cleaning and hygiene products made by
MEIKO ACTIVE.